

Pet Bed / Warmer Heating Pad Instructions

Economical low voltage only few pence to run

Thank you for choosing the Pet Heating Pad. Our goal is to provide the best products to enhance your pet's life.

This is an electrical product. Please ensure you read and understand the instructions below before using your pet pad. Failure to do so may result in electrical shock or fire causing serious bodily injury.

WARNING!

RISK OF ELECTRICAL SHOCK

WARNING: The product is designed specifically for pets and not to be used by humans.

This is an electrical product. Please read all directions before use. Failure to do so may result in electrical shock or fire causing serious bodily injury.

1. Read all instructions before using this product.
2. For indoor use only. Do NOT use outdoors.
3. For pet use only. NOT for human use.
4. Do not use if any visible damage is apparent (cracks, tears or blistering).
5. Must instantly turn off the Pet Heating pad and Unplug when overheat or charred flavor in use.
6. DO NOT make any modifications to switch button, wires and heat element.
7. DO NOT use another electronic heating device in conjunction with your heating pad.
8. Only use in conjunction with a pet bed, Don't cover anything on heating pad.
9. Do not use cord as handle.
10. Do not puncture or use any sharp object to secure the pad in place.
11. Unplug when not in use.
12. Place cord facing to the back of the bed away from how the pet enters the bed.
13. DO NOT IMMERSE PAD IN WATER.

Operating:

1. Ensure the Plug into a safety-tested electrical outlet.
3. Turn on: Push the "ON/OFF switch Key", the display will show 25 degrees, which is the default temperature of the heat pad. Press "UP Key", the temperature digital will up by 5 degrees everytime. Press "DOWN Key", the temperature will down by 5 degrees. There are totally 7 levels (25~55). Anytime the heat LED indicator on, said the heat pad in heating. Heat LED indicator off means the heat pad automatic shutoff. When the temperature is lower than you set will automatic start.
4. Turn off: Press the "Power Key" at any working state, display and heat LED off, heat pad into standby.
5. Clean: Turn off the Pet Heating Pad, Unplug heat pad from the wall outlet. Remove unit from the fleece cover. Fleece cover can be machine washed and must be dry before reassembling the unit. Wipe pad clean with a damp cloth or sponge. Do not use cleaners or chemicals. DO NOT IMMERSE PAD IN WATER. Wipe dry before reassembling unit.
6. Storage: Turn off the heat pad, dial out the heat pad and the adaptor. Store the pad in a dry, safe, clean and cool place after clean up.

Function:

This Heat pad is designed to cradle your pet in gentle warming comfort. The pad only heats up to the veterinarian recommended temperature. Barely warm to the touch and not hot. Overheating your pet can be dangerous. It is intended for use either with the fleece cover or to be placed under the outer layer of your pet's bed. Never allow your pet to lay on the unit without a cover. Soothing heat will relax and comfort your pet's sore muscles as well as warm their bodies on a regular basis.

The Pet Pad is supplied with a DC adaptor and an LED temperature control which allows you to adjust the temperature to seven different levels. The cable supplied has bite tube protection.

The low voltage adaptor security has safeguard.

Features:

- IC control box with LED indication;
- Temperature display;7 temperature levels to adjust(25~55);
- 55 degree thermal protector;
- Single circuit provides consistent temperature;
- Soft PVC envelope enclosure with waterproof;
- low, safe voltage;
- Thermostat inside of pad;Fuse inside of controller;
- Chew resistant cord casing;
- Clean pad with damp cloth;Flexible-Fits most pet beds.

Contents:


One Pet Heating pad, One 12V Adaptor, Instructions, One Fleece Cover

Extension Cord Use:

Extension cords may be used with your heat pad if proper care is used. The rating on the cord should be greater than that of the unit, cord should not be an obstruction in any way, take care in NOT allowing you pet to chew the cord.

Limitations of Liability:

1. Terms of usage is unconditional upon your acceptance, without changes to the terms, conditions or notice listed herein.
2. Proper use including reviewing all safety precautions.
3. No prohibited or unlawful use. The products is intended for pet use only.
4. Our reserves the right to change the terms and conditions under which this product is offered.
5. Buyer assumes all risks and liability from the use of this product. Our is not liable for any damages arising from use or misuse of this product.

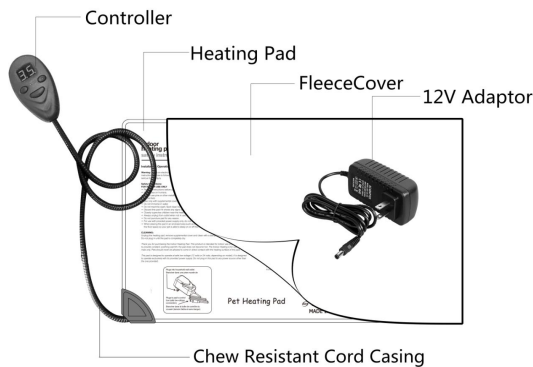

Specifications:

Model name:	Pet Heating pad			
Model No.:	HPP3030	HPP4030	HPP5050	HPP6540
Size:	Small Size Circular D30cm	Medium Size Rectangle 40x30cm	Larger Size Square 50x50cm	X-Larger Size Rectangle 65x40cm
Adaptor Input:	AC100~240V 50/60Hz			
Adaptor Output:	DC12V2000mA		DC12V3000mA	
Power:	13 Watts	18 Watts	32 Watts	
Adaptor Certification:	UL / GS / BS / SAA / PSE / KC...			



MADE IN CHINA